



Illustrated Parts List

Model Series

124L00

TYPE NUMBERS
0112 through 4947.

TABLE OF CONTENTS

Air Cleaner	4
Alternator	6
Blower Housing/Shrouds	5
Camshaft	2
Carburetor	3
Controls	4
Crankshaft	2
Cylinder	2
Electric Starter	6
Electrical	6
Engine Sump	2
Exhaust System	4
Flywheel	6
Flywheel Brake	4
Fuel Supply	3
Governor Spring	4
Ignition	6
Kits/Gaskets	2 & 3
Lubrication	2
Piston Group	2
Rewind Starter	5
Valves	2



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.

124L00

1319 WARNING LABEL




REQUIRED when replacing parts with warning labels affixed.









1058 OPERATOR'S MANUAL



1330 REPAIR MANUAL

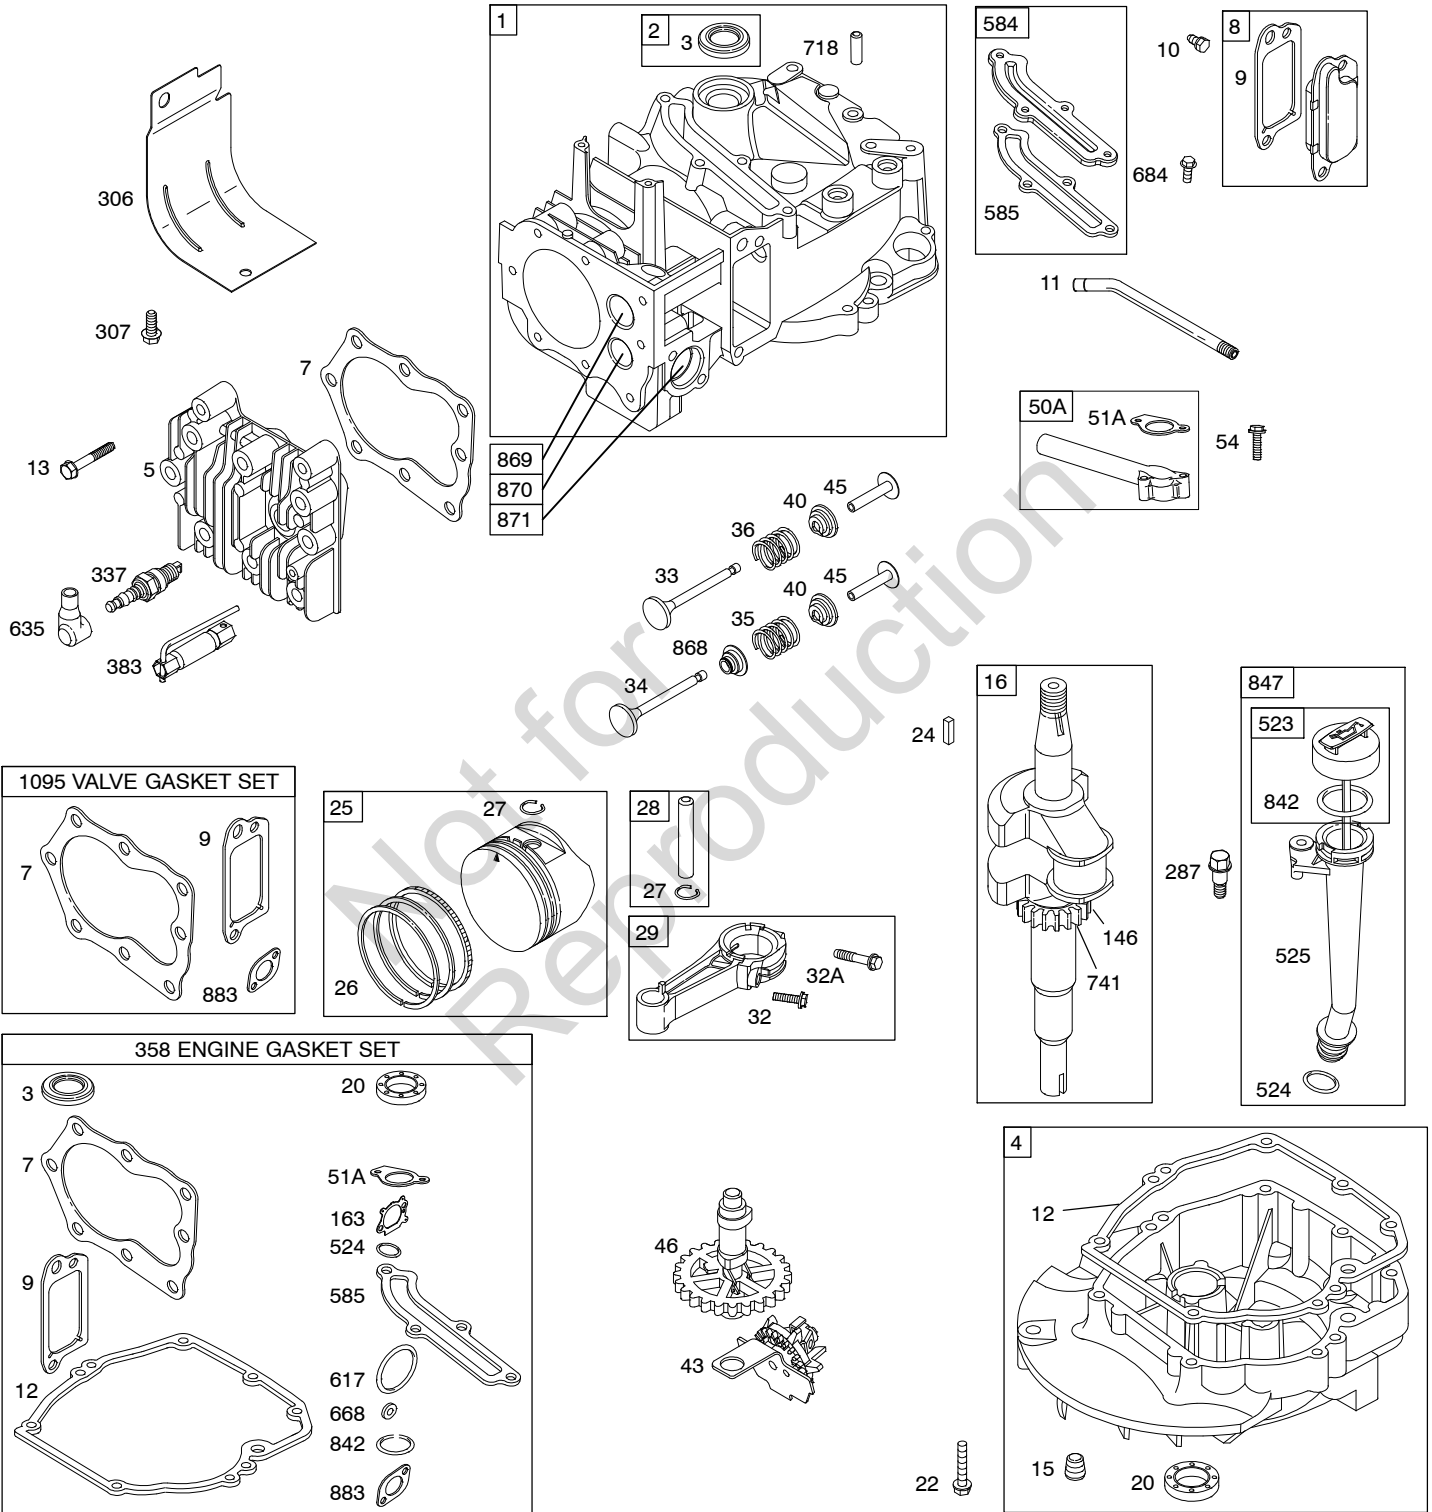


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3976-2 Assemblies include all parts shown in frames. **05/08/2009**




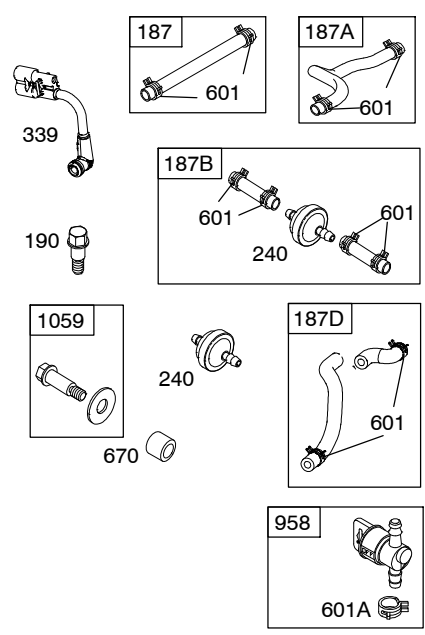
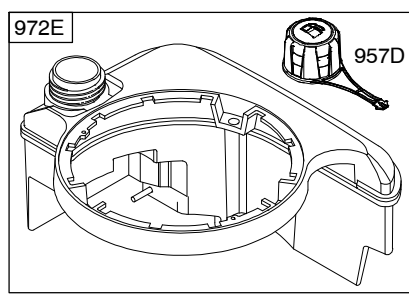
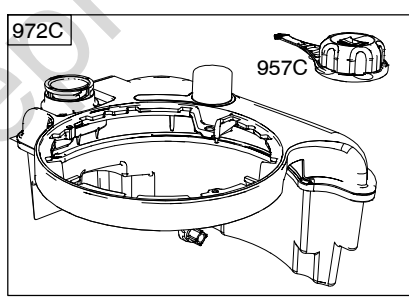
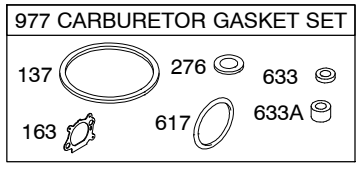
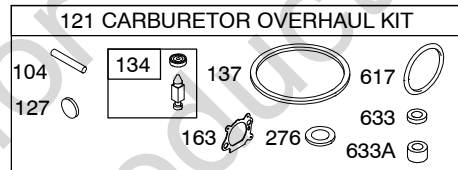
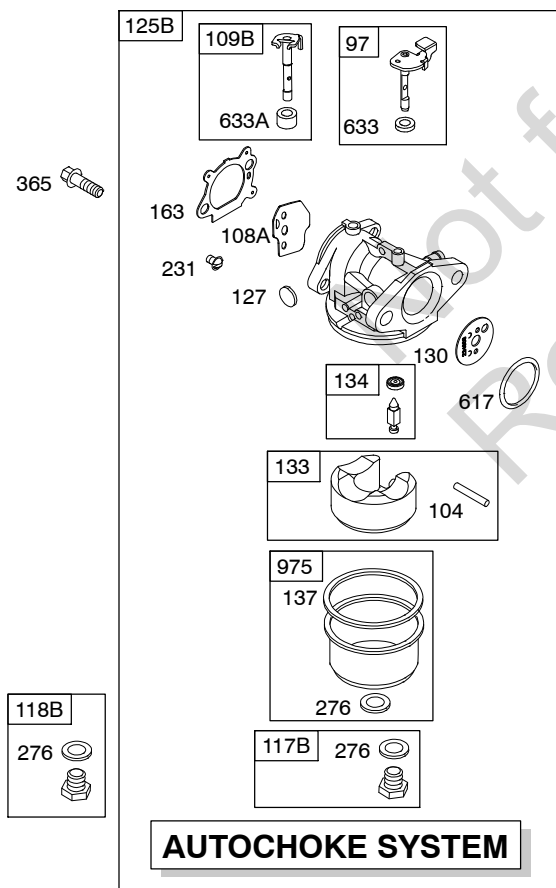
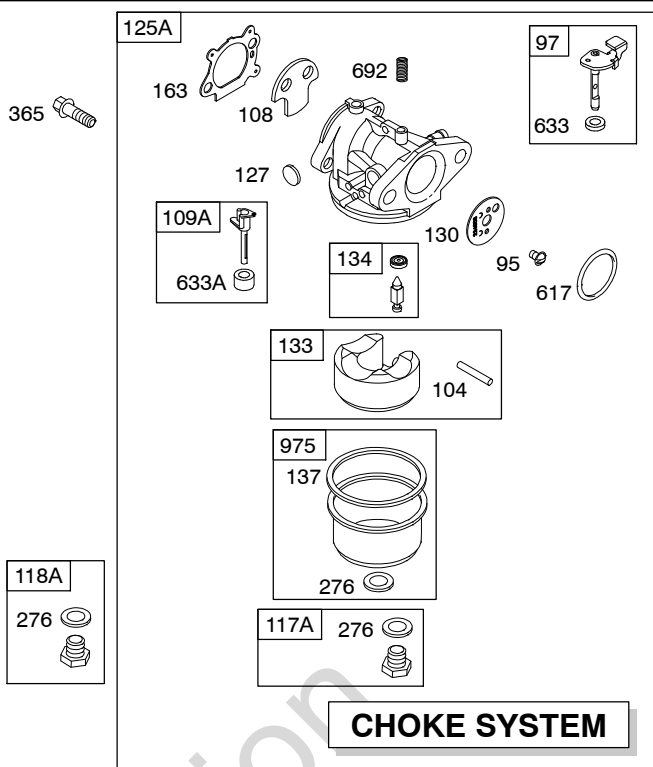
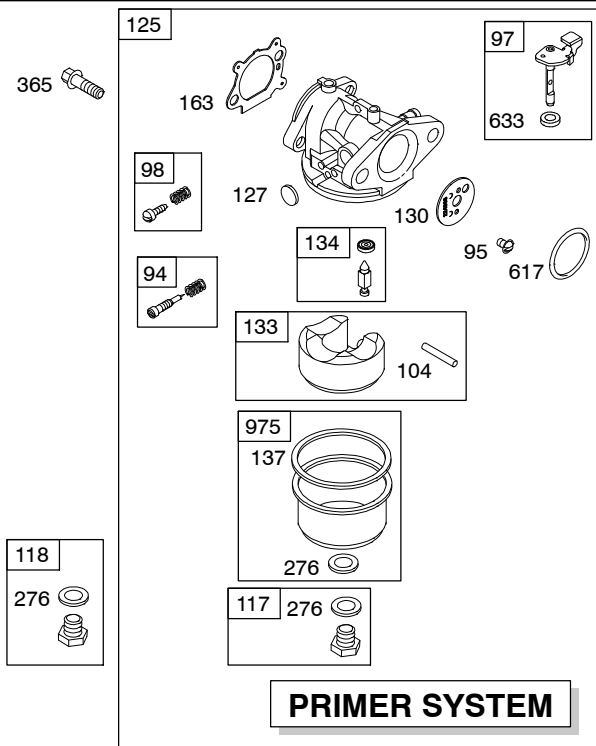


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3976-3 Assemblies include all parts shown in frames. 05/08/2009


124L00

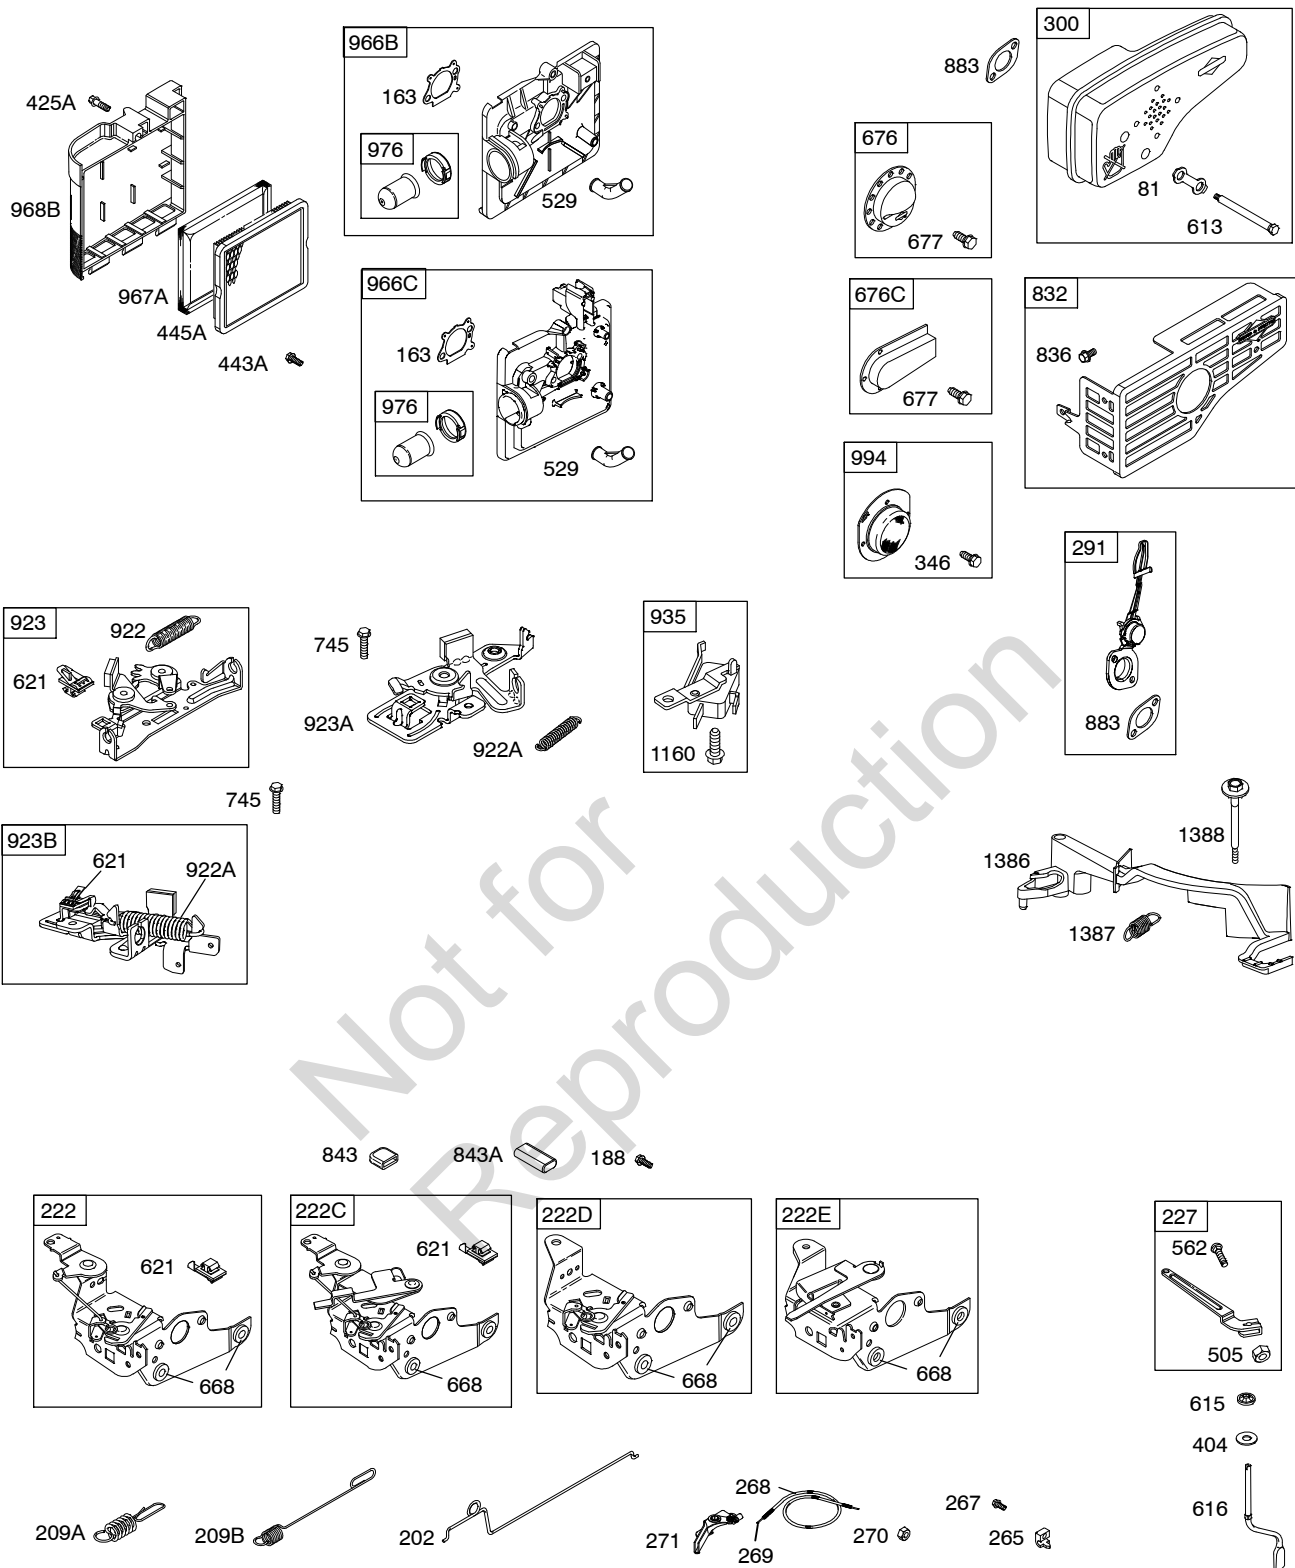

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

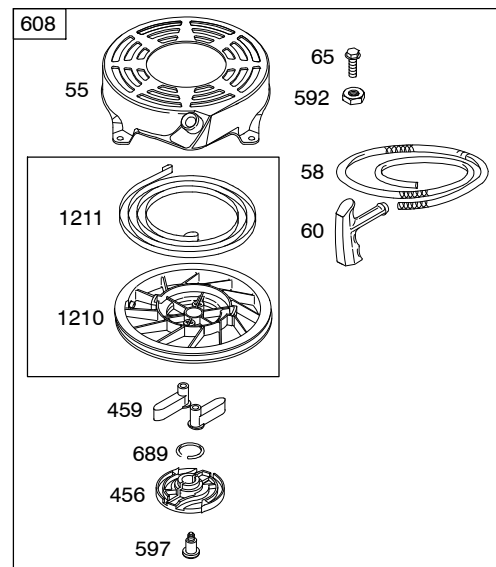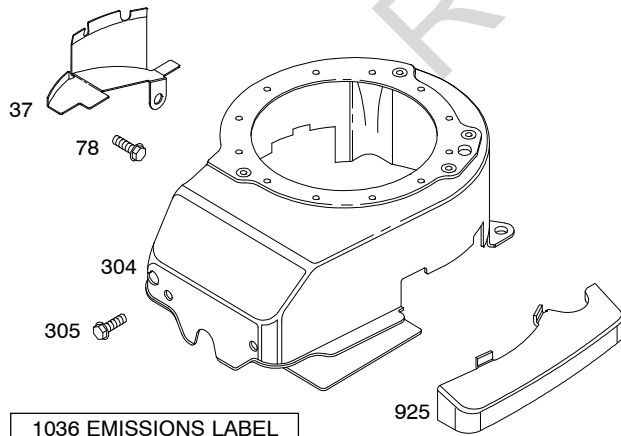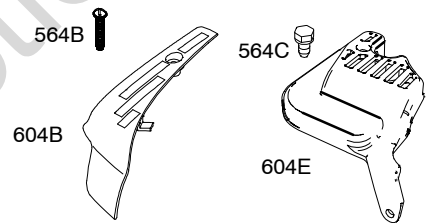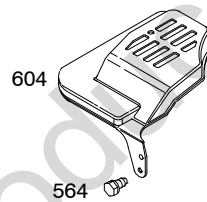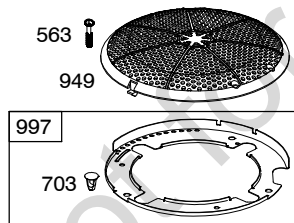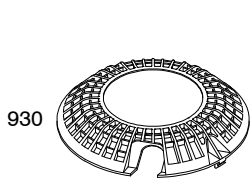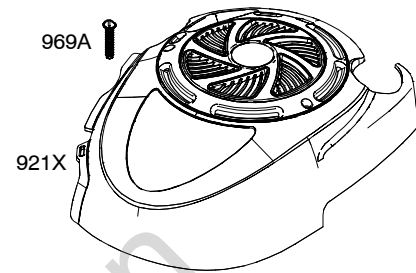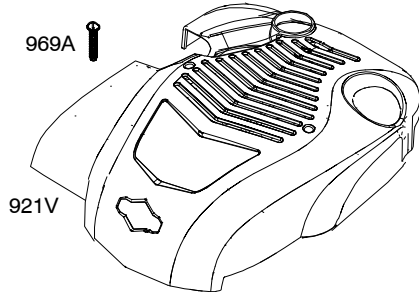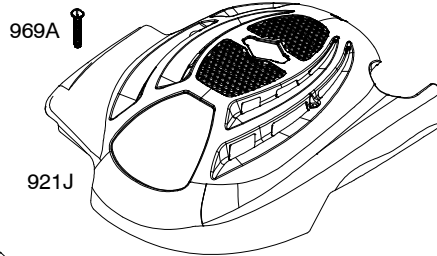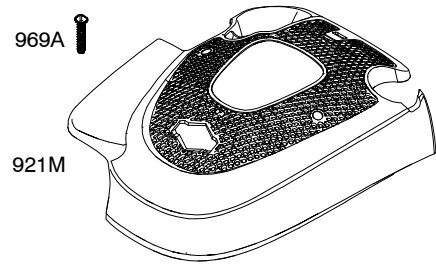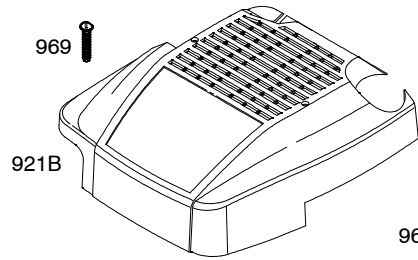

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3976-5 Assemblies include all parts shown in frames. 05/08/2009

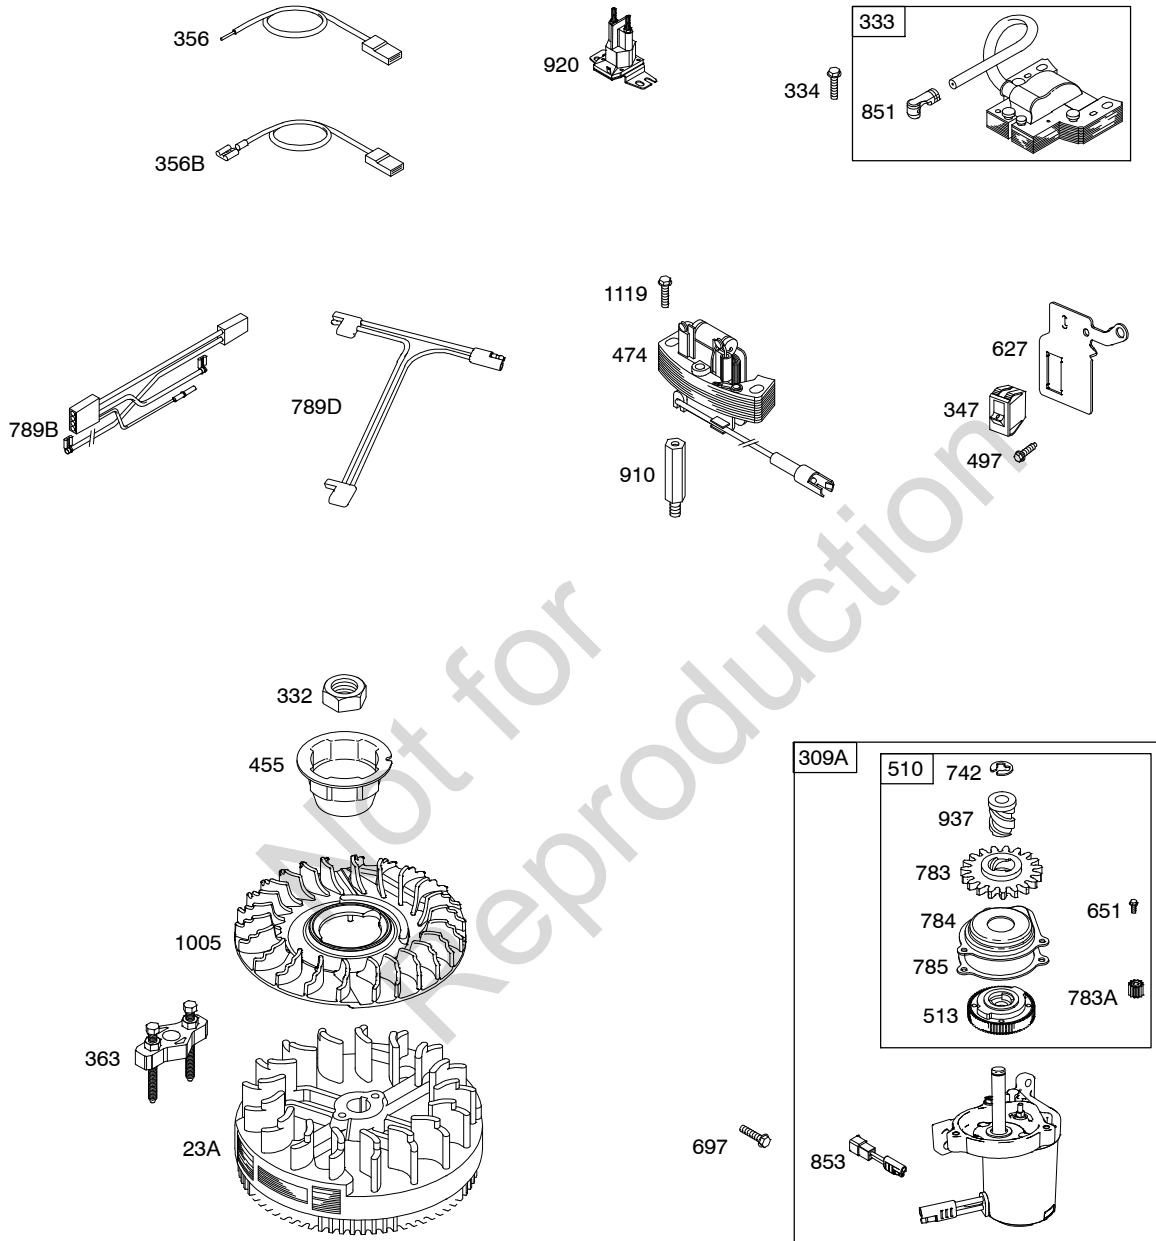

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	
1	697322	Cylinder Assembly	22	691092	Screw (Crankcase Cover/ Sump)	26	797304	Ring Set (Standard) (Used After Code Date 09041600).	
2	399269	Kit-Bushing/Seal (Magneto Side)	23A	691992	Flywheel Used on Type No(s). 0120, 0121, 0124, 0130, 0133, 0134, 0153, 0154, 0165, 0166, 0530.			----- Note ----- 795431 Ring Set (Standard) (Used After Code Date 07090300 and Before Code Date 09041700).	
3	*299819S	Seal-Oil (Magneto Side)			----- Note ----- 691987 Flywheel Used on Type No(s). 0112, 0115, 0126, 0127, 0128, 0645, 0650, 0212, 0975, 1103, 1306, 1307, 4115, 4650, 4947.			791098 Ring Set (Standard) (Used Before Code Date 07090400).	
4	493279	Sump-Engine	24	222698S	Key-Flywheel			797305 Ring Set (.020" Oversize) (Used After Code Date 09041600).	
5	691160	Head-Cylinder	25	797302	Piston Assembly (Standard) (Used After Code Date 09041600).			795432 Ring Set (.020" Oversize) (Used After Code Date 07090300 and Before Code Date 09041700).	
7	*Ø692249	Gasket-Cylinder Head			----- Note ----- 795429 Piston Assembly (Standard) (Used After Code Date 07090300 and Before Code Date 09041700).			791324 Ring Set (.020" Oversize) (Used Before Code Date 07090400).	
8	695250	Breather Assembly			791097 Piston Assembly (Standard) (Used Before Code Date 07090400).	27	691588	Lock-Piston Pin (Used After Code Date 09041600).	
9	*Ø696125	Gasket-Breather			797303 Piston Assembly (.020" Oversize) (Used After Code Date 09041600).			----- Note ----- 691866 Lock-Piston Pin (Used Before Code Date 09041700).	
10	691125	Screw (Breather Assembly)			795430 Piston Assembly (.020" Oversize) (Used After Code Date 07090300 and Before Code Date 09041700).			499423 Pin-Piston (Used Before Code Date 09041700).	
11	691781	Tube-Breather			791326 Piston Assembly (.020" Oversize) (Used Before Code Date 07090400).	28	298909	Pin-Piston (Used After Code Date 09041600).	
12	*692232	Gasket-Crankcase						----- Note ----- 499424 Rod- Connecting (Used Before Code Date 09041700).	
13	690912	Screw (Cylinder Head)							
15	691680	Plug-Oil Drain (Square Socket)							
16	691455	Crankshaft Used on Type No(s). 0121, 0133, 0530. ----- Note ----- 696009 Crankshaft Used on Type No(s). 0126, 0127, 0128, 0212. 691450 Crankshaft Used on Type No(s). 0645, 0650, 0947, 0975, 1103, 1306, 1307, 4650, 4947. 691452 Crankshaft Used on Type No(s). 0115, 4115. 694849 Crankshaft Used on Type No(s). 0120, 0124. 691451 Crankshaft Used on Type No(s). 0112, 0130, 0153, 0165. 694850 Crankshaft Used on Type No(s). 0154, 0166. 797372 Crankshaft Used on Type No(s). 0134.							
20	*399781S	Seal-Oil (PTO Side)							

* Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

124L00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
32	691664	Screw (Connecting Rod)	108A	795935	Valve-Choke (Used After Code Date 08031200). ----- Note -----	121	498260	Kit-Carburetor Overhaul
32A	695759	Screw (Connecting Rod)				125	498170	Carburetor (Primer System)
33	262651S	Valve-Exhaust				125A	792253	Carburetor (Choke System) ----- Note -----
34	262652S	Valve-Intake						795882 Carburetor Used on Type No(s). 0133.
35	691270	Spring-Valve (Intake)	108A	790844	Valve-Choke	125B	794304	Carburetor (Autochoke System)
36	691270	Spring-Valve (Exhaust)	109A	498593	Shaft-Choke			
37	694086	Guard-Flywheel	109B	795936	Shaft-Choke (Used After Code Date 08031200). ----- Note -----	127	694468	Plug-Welch
40	692194	Retainer-Valve				130	696564	Valve-Throttle
43	691997	Slinger-Governor/Oil				133	398187	Float-Carburetor
45	690548	Tappet-Valve				134	398188	Kit-Needle/Seat
46	691449	Camshaft				137	693981	Gasket-Float Bowl
50A	794305	Manifold-Intake	117	494870	Jet-Main (Standard)	146	690979	Key-Timing
51A	794306	Gasket-Intake	117A	498981	Jet-Main (Standard) ----- Note -----	163	272653	Gasket-Air Cleaner
54	691650	Screw (Intake Manifold)				187	791766	Line-Fuel (Cut to Required Length)
55	691421	Housing-Rewind Starter				187A	791873	Line-Fuel (Molded)
58	697316	Rope-Starter (Cut To Required Length)				187B	791891	Line-Fuel (Includes Filter)
60	281434S	Grip-Starter Rope	117B	695042	Jet-Main (Standard) (Used After Code Date 08061900). ----- Note -----	187D	795090	Line-Fuel (Molded)
65	690837	Screw (Rewind Starter)				188	693399	Screw (Control Bracket)
78	691108	Screw (Flywheel Guard)				190	690940	Screw (Fuel Tank)
81	691740	Lock-Muffler Screw				202	691829	Link-Mechanical Governor
94	493765	Kit-Idle Mixture						
95	691636	Screw (Throttle Valve)						
97	493267	Shaft-Throttle (Metal) ----- Note -----	118	497315	Jet-Main (High Altitude)			
		696565 Shaft-Throttle (Plastic)	118A	494870	Jet-Main (High Altitude) ----- Note -----			
98	398185	Kit-Idle Speed						
104	691242	Pin-Float Hinge						
			118B	694975	Jet-Main (High Altitude) (Used After Code Date 08061900). ----- Note -----			
								695042 Jet-Main (High Altitude) (Used Before Code Date 08062000).

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
209A	795883	Spring-Governor Used on Type No(s). 0133.	222	790143	Bracket-Control (Remote/Manual Friction)(Primer)	300	692038	Muffler ----- Note -----
209B	790944	Spring-Governor Used on Type No(s). 0530. ----- Note ----- 691292 Spring-Governor Used on Type No(s). 0115, 0126, 0212, 4115. 699056 Spring-Governor Used on Type No(s). 0127, 0128, 0645, 0650, 0947, 0975, 1103, 1306, 1307, 4650, 4947. 691290 Spring-Governor Used on Type No(s). 0120, 0124, 0134. 691291 Spring-Governor Used on Type No(s). 0130, 0153, 0154, 0165, 0166. 691851 Spring-Governor Used on Type No(s). 0112, 0121. 795879 Spring-Governor Used on Type No(s). 0133.	222C	692150	Bracket-Control (Variable Speed) (5 Position Manual Choke) ----- Note ----- 795880 Bracket-Control (Variable Speed) (5 Position Manual Choke) Used on Type No(s). 0133.	300	692038	790828 Muffler Used on Type No(s). 0126, 0127, 0128, 0650, 4650.
			222D	791128	Bracket-Control (Fixed Speed)	304	493294	Housing-Blower Used on Type No(s). 0112, 0121, 0124, 0130, 0133, 0134, 0153, 0154, 0165, 0166, 0530. ----- Note ----- 493293 Housing-Blower Used on Type No(s). 0212, 0947, 0975, 1103.
			222E	692982	Bracket-Control (Manual Friction 5 Position Manual Choke)			695892 Housing-Blower Used on Type No(s). 0115, 0130, 0645, 1306, 1307, 4115, 4947.
			227	690783	Lever-Governor Control			790826 Housing-Blower Used on Type No(s). 0126, 0127, 0128, 0650, 4650.
			231	691636	Screw (Choke Valve)			791291 Housing-Blower Used on Type No(s). 0120.
			240	298090S	Filter-Fuel	305	691108	Screw (Blower Housing)
			265	690798	Clamp-Casing	306	690450	Shield-Cylinder
			267	691044	Screw (Casing Clamp)	307	690345	Screw (Cylinder Shield)
			268	691025	Casing-Control Wire (Cut to Required Length)	309A	795092	Motor-Starter
			269	691026	Wire-Control (Cut to Required Length)	332	690662	Nut (Flywheel)
			270	691027	Nut (Control Wire Casing)	333	802574	Armature-Magneto
			271	691028	Lever-Control	334	691061	Screw (Magneto Armature)
			276 ♦	271716	Washer-Sealing (Main Jet)			
			287	690940	Screw (Dipstick Tube)			
			291	790830	Thermostat			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

♦ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

124L00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
337	802592S	Plug-Spark (Resistor) ----- Note ----- 697451 Plug-Spark (EMS)	563	691138	Screw (Debris Guard Screen)	668	★493823	Spacer
339	794797	Tube/Connector Assemble	564	690664	Screw (Control Cover)	670	692294	Spacer-Fuel Tank
346	690661	Screw (Spark Arrestor)	564B	698589	Screw (Control Cover)	676	396548	Deflector-Muffler
347	691396	Switch-Rocker	564C	690351	Screw (Control Cover)	676C	493871	Deflector-Muffler
356	692390	Wire-Stop	584	697734	Cover-Breather Passage	677	690661	Screw (Muffler Deflector)
356B	693010	Wire-Stop	585	★691879	Gasket-Breather Passage	684	690345	Screw (Breather Passage Cover)
358	794307	Gasket Set-Engine	592	690800	Nut (Rewind Starter)	689	691855	Spring-Detent
363	19069	Flywheel Puller	597	691696	Screw (Pawl Friction Plate)	692	690572	Spring-Friction
365	691688	Screw (Carburetor)	601	791850	Clamp-Hose	697	691127	Screw (Drive Cap)
383	89838S	Wrench-Spark Plug	601A	691038	Clamp-Hose	718	690959	Pin-Locating
404	690272	Washer (Governor Crank)	604	691757	Cover-Control	741	795755	Gear-Timing
425A	690670	Screw (Air Cleaner Cover)	604B	790703	Cover-Control	703	696309	Clip
443A	692523	Screw (Air Cleaner Primer Base)	604E	794794	Cover-Control	741	795755	Gear-Timing (Plastic) ----- Note -----
445A	491588S	Filter-Air Cleaner Cartridge	608	497680	Starter-Rewind			794388 Gear-Timing (Use Without Woodruff Key)
455	791960	Cup-Flywheel	613	691340	Screw (Muffler) ----- Note -----			(Used After Code Date 07093000).
456	692299	Plate-Pawl Friction			790833 Screw (Muffler) Used on Type No(s). 0126, 0127, 0128, 0650, 4650.			790345 Gear-Timing (Use Without Woodruff Key) (Used Before Code Date 07100100).
459	281505S	Plate-Ratchet	615	690340	Retainer-Governor Shaft			691830 Gear-Timing (Uses Woodruff Key)
474	691991	Alternator	616	698801	Crank-Governor	742	93941	Retainer-E Ring
497	690664	Screw (Stop Switch Bracket)	617★●◆270344	Seal-O Ring (Intake Manifold)		745	691648	Screw (Brake)
505	691251	Nut (Governor Control Lever)	621	692310	Switch-Stop	783	691918	Gear-Pinion (Starter Drive)
510	795093	Drive-Starter	627	792565	Bracket-Stop Switch	783A	691269	Gear-Pinion
513	692358	Drive-Clutch	633	◆691321	Seal-Choke/Throttle Shaft	784	795095	Cover-Starter Gear
523	499621	Dipstick	633A	◆693867	Seal-Choke/Throttle Shaft	785	692352	Gasket-Starter Cover
524	★692296	Seal-Dipstick Tube				789B	696547	Harness-Wiring
525	495265	Tube-Dipstick				789D	796574	Harness-Wiring
529	691923	Grommet	635	66538S	Boot-Spark Plug	832	499034	Guard-Muffler
562	92613	Bolt (Governor Control Lever)	651	691660	Screw (Starter Gear Cover)	836	690664	Screw (Muffler Guard)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
842	★691031	Seal-O Ring (Dipstick Tube)	925	795403	Cover-Linkage	973	691325	Spline-Starter
843	691884	Sleeve-Lever	930	691919	Guard-Rewind	975	493640	Bowl-Float
843A	691895	Sleeve-Lever	935	499421	Switch-Interlock	976	694395	Primer-Carburetor
847	692047	Dipstick/Tube Assembly	949	696306	Guard-Debris Screen	977	498261	Gasket Set-Carburetor
851	493880S	Terminal-Spark Plug	957C	794793	Cap-Fuel Tank (Plastic)	994	398067	Arrestor-Spark
853	695268	Adapter-Wire	957D	796577	Cap-Fuel Tank (Plastic)	997	696310	Shield-Debris
868	697338	Seal-Valve	958	698183	Valve-Fuel Shut Off (Plastic)	1005	691346	Fan-Flywheel
869	691155	Seat-Valve (Intake)	966B	792040	Base-Air Cleaner Primer Used on Type No(s). 0126, 0127, 0128, 0130, 0133, 0154, 1306, 1307, 4115, 4650, 4947.	1036		Label-Emissions (Available From A Briggs & Statton Authorized Dealer)
870	690380	Seat-Valve (Exhaust)	966C	794798	Base-Air Cleaner Primer Used on Type No(s). 0112, 0115, 0120, 0121, 0124, 0134, 0153, 0165, 0166, 0212, 0530, 0645, 0650, 0947, 0975, 1103.	1058	277039	Operator's Manual
871	262001	Bushing-Valve Guide (Exhaust) ----- Note ----- 63709 Bushing-Valve Guide (Intake)	967A	493537S	Filter-Pre Cleaner	1059	692311	Kit-Screw/Washer
883	★Ø691881	Gasket-Exhaust	968B	692298	Cover-Air Cleaner	1095	498528	Gasket Set-Valve
910	691094	Stud (Alternator)	969	690700	Screw (Blower Housing Cover)	1119	692979	Screw (Alternator)
920	691656	Solenoid-Starter	969A	691138	Screw (Blower Housing Cover)	1160	690345	Screw (Interlock Switch)
921B	692931	Cover-Blower Housing	972C	794792	Tank-Fuel (Plastic)	1210	498144	Pulley/Spring Assembly (Pulley)
921J	790036	Cover-Blower Housing	972E	796578	Tank-Fuel (Plastic)	1211	498144	Pulley/Spring Assembly (Spring)
921M	792652	Cover-Blower Housing				1319	794467	Label-Warning
921V	795089	Cover-Blower Housing				1330	270962	Manual-Repair
921X	796706	Cover-Blower Housing				1386	790848	Vane-Air (Autochoke System)
922	691831	Spring-Brake				1387	790849	Spring-Air Vane
922A	692135	Spring-Brake				1388	790850	Screw (Air Vane) (Autochoke System)
923	691994	Brake						
923A	695891	Brake						
923B	796136	Brake Used on Type No(s). 0126, 0127, 0130, 0133. ----- Note ----- 796387 Brake Used on Type No(s). 0128, 1306, 4947.						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.