


# **Parts Manual**


Model Components	Page
Air Cleaner Group	. 4
Blower Housing Group	. 6
Carburetor Group	. 8
Controls Group	. 10
Crankcase Cover/Sump and Lubrication Group	. 12
Crankshaft Group	
Cylinder Group	. 16
Cylinder Head Group	. 18
Exhaust Group	. 22
Flywheel, Ignition, and Starter Group	. 24
Fuel Supply Group	. 26


Moi Folduciion

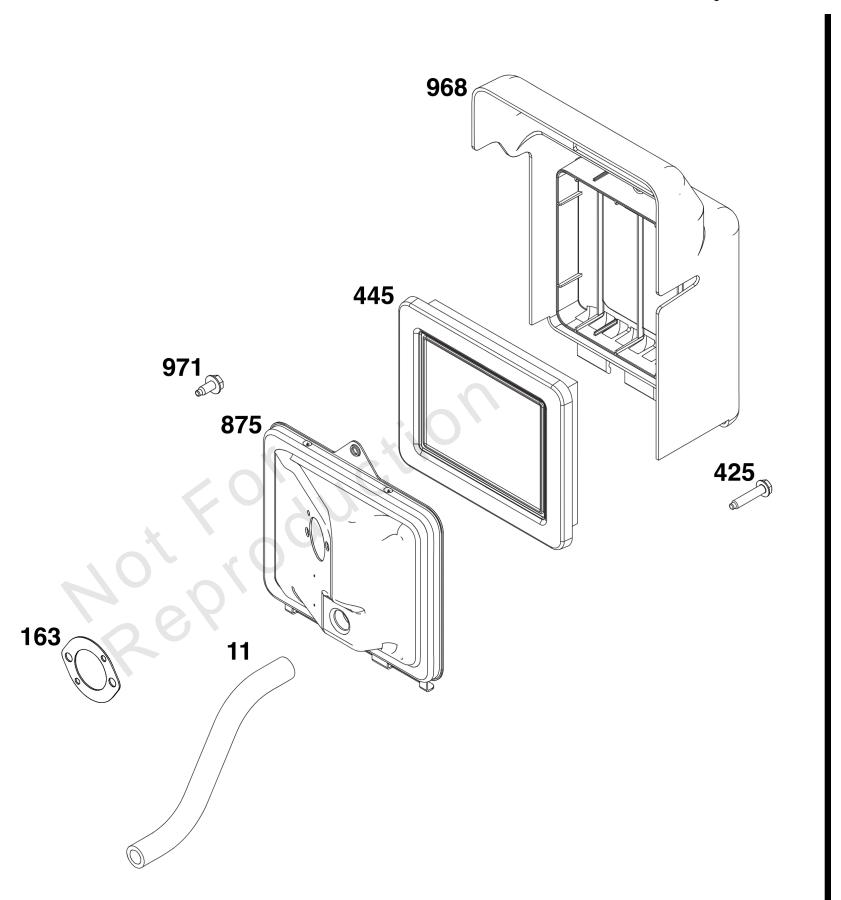

#### Air Cleaner Group

REF NO	PART NO	QTY	DESCRIPTION
11	692600	1	TUBE, Breather
163		1	GASKET, Air Cleaner -(Part information located in Carburetor Group.)
425	699208	1	SCREW -(Air Cleaner Cover)
445	595030	1	FILTER, A/C Cartridge
875	699207	1	BASE-AIR CLEANER
968	692584	1	COVER, Air Cleaner
971	798649	2	SCREW -(Air Cleaner Base to Carburetor/Throttle Body)

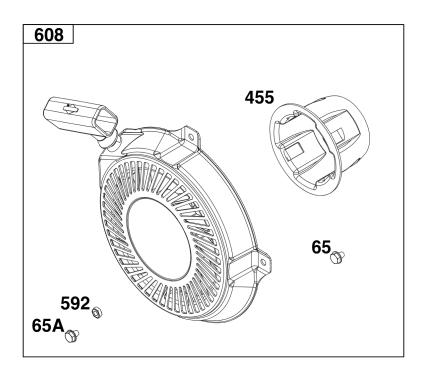


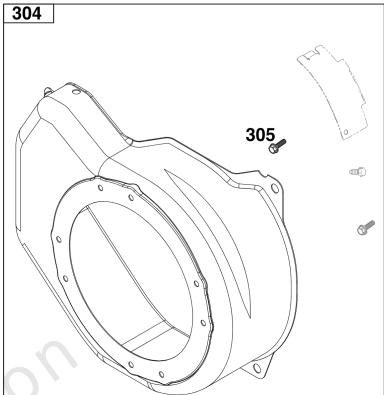

1319A 1036 1319 !


#### Blower Housing Group


REF NO	PART NO	QTY	DESCRIPTION
65		4	SCREW -(Part information located in Flywheel/Ignition/Starter Group.)
65A		4	SCREW -(Part information located in Flywheel/Ignition/Starter Group.)
304	699598	1	HOUSING, Blower
305	699481	3	SCREW -(Blower Housing)
455		1	CUP, Flywheel -(Part information located in Flywheel/Ignition/Starter Group.)
592		4	NUT -(Part information located in Flywheel/Ignition/Starter Group.)
608		1	STARTER, Rewind -(Part information located in Flywheel/Ignition/Starter Group.)
1036			LABEL, Emissions -(Available from a Briggs & Stratton Authorized Dealer)
1319	794467		LABEL, Warning -(REQUIRED When Replacing Parts With Warning Labels Affixed)
1319A	797669		LABEL, Warning -(REQUIRED When Replacing Parts With Warning Labels Affixed)

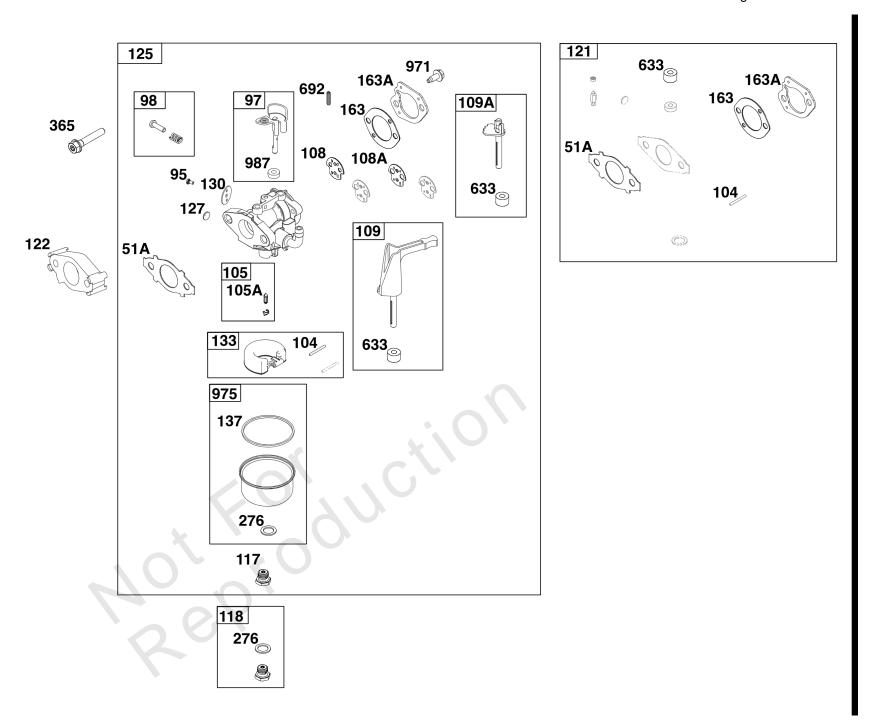

## Carburetor Group


REF NO	D PART NO	QTY	DESCRIPTION
51A		2	GASKET, Intake -(Part information located in Cylinder Head Group.)
95	691636	1	SCREW -(Throttle Valve)
97	797628	1	SHAFT, Throttle
98	797156	1	KIT, Idle Speed
104	797622	1	PIN, Float Hinge
105	595324	1	VALVE, Float Needle
105A	797139	1	VALVE, Float Needle
108	692567	1	VALVE-CHOKE
108A	796993	1	VALVE, Choke
109	690023	1	SHAFT, Choke
109A	790624	1	SHAFT, Choke
117	798652	1	JET, Main -(Standard)
118	799178	1	JET, Main -(High Altitude)
121	792006		KIT, Carburetor Overhaul -(Service Kits may include extra parts not specific to this engine.)
122	791717	1	SPACER, Carburetor
125	798654	1	CARBURETOR
127	797633	1	PLUG, Welch
130	797630	1	VALVE, Throttle
133	797136	1	FLOAT, Carburetor
137	797625	1	GASKET, Float Bowl
163	696024	1	GASKET, Air Cleaner -(Air Cleaner)
163A	792870	1	GASKET, Air Cleaner -(Air Cleaner)
276	797632	1	WASHER, Sealing
365	699484	2	SCREW -(Carburetor/Throttle Body)
633	693867	1	SEAL, Choke/Throttle Shaft
692	797624	1	SPRING, Detent
971		2	SCREW -(Part information located in Air Cleaner Group.)
975	797631	1	BOWL, Float
987	797629	1	SEAL, Choke/Throttle Shaft

 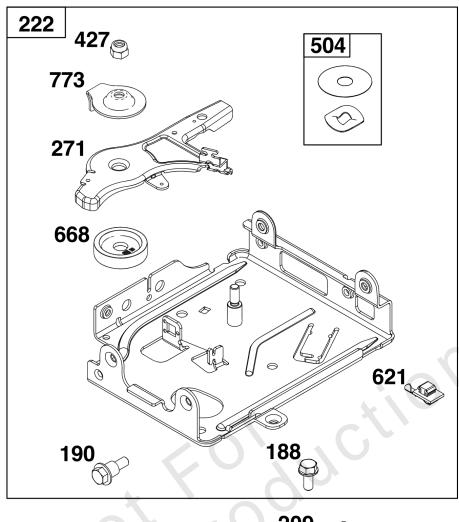


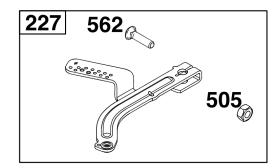





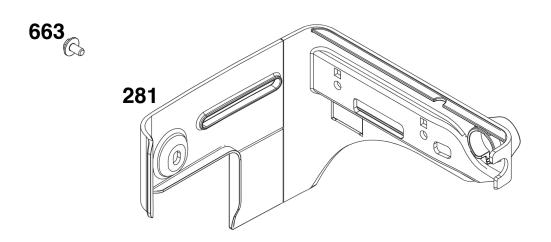





#### Controls Group

188       699479       4       SCREW -(Control Bracket)         190       597133       4       SCREW -(Part information located in Fuel Supply Group.)         209       692571       1       SPRING, Governor         209A       691278       1       SPRING, Governor         222       793108       1       BRACKET, Control         227       794367       1       LEVER, Governor Control         271       695743       1       LEVER, Control         281       793122       1       PANEL, Control         356        1       WIRE, Stop - (Part information located in Flywheel/Ignition/Starter Group.)         427       798458       1       NUT - (Control Bracket)         504       695383       1       SET, Friction Washer         505       691251       1       NUT - (Governor Control Lever)         562       691119       1       BOLT - (Governor Control Lever)	
(Part information located in Fuel Supply Group.)  209 692571 1 SPRING, Governor  209A 691278 1 SPRING, Governor  222 793108 1 BRACKET, Control  227 794367 1 LEVER, Governor Control  271 695743 1 LEVER, Control  281 793122 1 PANEL, Control  356 1 WIRE, Stop - (Part information located in Flywheel/Ignition/Starter Group.)  427 798458 1 NUT - (Control Bracket)  504 695383 1 SET, Friction Washer  505 691251 1 NUT - (Governor Control Lever)  562 691119 1 BOLT	
209A       691278       1       SPRING, Governor         222       793108       1       BRACKET, Control         227       794367       1       LEVER, Governor Control         271       695743       1       LEVER, Control         281       793122       1       PANEL, Control         356        1       WIRE, Stop - (Part information located in Flywheel/Ignition/Starter Group.)         427       798458       1       NUT - (Control Bracket)         504       695383       1       SET, Friction Washer         505       691251       1       NUT - (Governor Control Lever)         562       691119       1       BOLT	
222       793108       1       BRACKET, Control         227       794367       1       LEVER, Governor Control         271       695743       1       LEVER, Control         281       793122       1       PANEL, Control         356        1       WIRE, Stop - (Part information located in Flywheel/Ignition/Starter Group.)         427       798458       1       NUT - (Control Bracket)         504       695383       1       SET, Friction Washer         505       691251       1       NUT - (Governor Control Lever)         562       691119       1       BOLT	
227       794367       1       LEVER, Governor Control         271       695743       1       LEVER, Control         281       793122       1       PANEL, Control         356        1       WIRE, Stop - (Part information located in Flywheel/Ignition/Starter Group.)         427       798458       1       NUT - (Control Bracket)         504       695383       1       SET, Friction Washer         505       691251       1       NUT - (Governor Control Lever)         562       691119       1       BOLT	
271       695743       1       LEVER, Control         281       793122       1       PANEL, Control         356        1       WIRE, Stop - (Part information located in Flywheel/Ignition/Starter Group.)         427       798458       1       NUT - (Control Bracket)         504       695383       1       SET, Friction Washer         505       691251       1       NUT - (Governor Control Lever)         562       691119       1       BOLT	
281       793122       1       PANEL, Control         356        1       WIRE, Stop -(Part information located in Flywheel/Ignition/Starter Group.)         427       798458       1       NUT -(Control Bracket)         504       695383       1       SET, Friction Washer         505       691251       1       NUT -(Governor Control Lever)         562       691119       1       BOLT	
356        1       WIRE, Stop - (Part information located in Flywheel/Ignition/Starter Group.)         427       798458       1       NUT - (Control Bracket)         504       695383       1       SET, Friction Washer         505       691251       1       NUT - (Governor Control Lever)         562       691119       1       BOLT	
-(Part information located in Flywheel/Ignition/Starter Group.)  427 798458 1 NUT -(Control Bracket)  504 695383 1 SET, Friction Washer  505 691251 1 NUT -(Governor Control Lever)  562 691119 1 BOLT	
-(Control Bracket)  504 695383 1 SET, Friction Washer  505 691251 1 NUT -(Governor Control Lever)  562 691119 1 BOLT	
505 691251 1 NUT -(Governor Control Lever) 562 691119 1 BOLT	
-(Governor Control Lever) 562 691119 1 BOLT	
-(Oovernor Control Lever)	
621 692310 1 SWITCH, Stop	
632 693408 1 SPRING/LINK, Mechanical Governor	
652 699206 1 SCREW -(Support Bracket)	
663 699206 2 SCREW -(Control Panel)	
668 694257 1 SPACER	
773 694258 1 RETAINER	


11

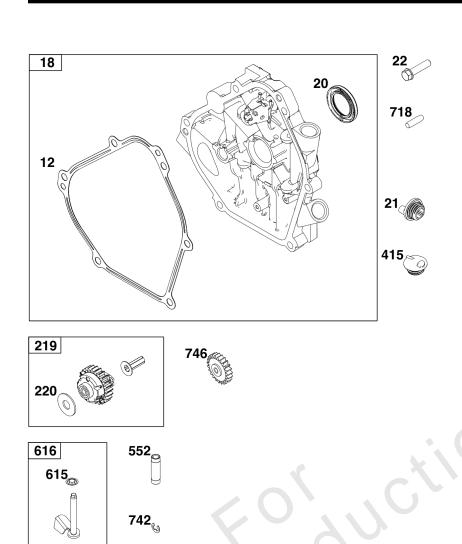

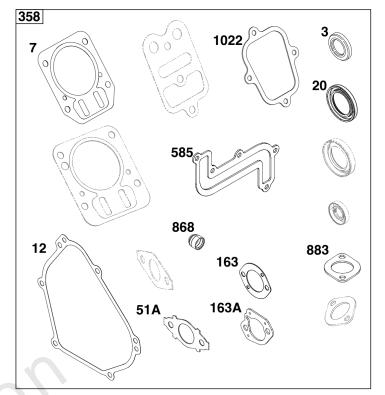


# Crankcase Cover/Sump and Lubrication Group

REF NO	PART NO	QTY	DESCRIPTION
3		1	SEAL, Oil -(Part information located in Cylinder Group.)
7		1	GASKET, Cylinder Head -(Part information located in Cylinder Head Group.)
12	699485	1	GASKET, Crankcase
18	699804	1	COVER, Crankcase
20	692550	1	SEAL-OIL -(PTO Side)
21	281658S	2	CAP, Oil Fill
22	594519	6	SCREW -(Crankcase Cover/Sump)
51A		2	GASKET, Intake -(Part information located in Cylinder Head Group.)
163		1	GASKET, Air Cleaner -(Part information located in Carburetor Group.)
163A		1	GASKET, Air Cleaner -(Part information located in Carburetor Group.)
219	693578	1	GEAR, Governor
220	691724	1	WASHER -(Governor Gear)
358			GASKET SET, Engine -(Part information located in Cylinder Group.)
415	693463	1	PLUG
552	692346	1	BUSHING, Governor Crank
585	791760	1	GASKET, Breather Passage
615	692576	1	RETAINER, Governor Shaft
616	692547	1	CRANK, Governor
718	592860	2	PIN, Locating
742	692564	1	RETAINER, E Ring
746	790278	1	GEAR-IDLER
868		1	SEAL, Valve -(Part information located in Cylinder Head Group.)
883		1	GASKET, Exhaust -(Part information located in Exhaust Group.)
1022		1	GASKET, Rocker Cover -(Part information located in Cylinder Head Group.)

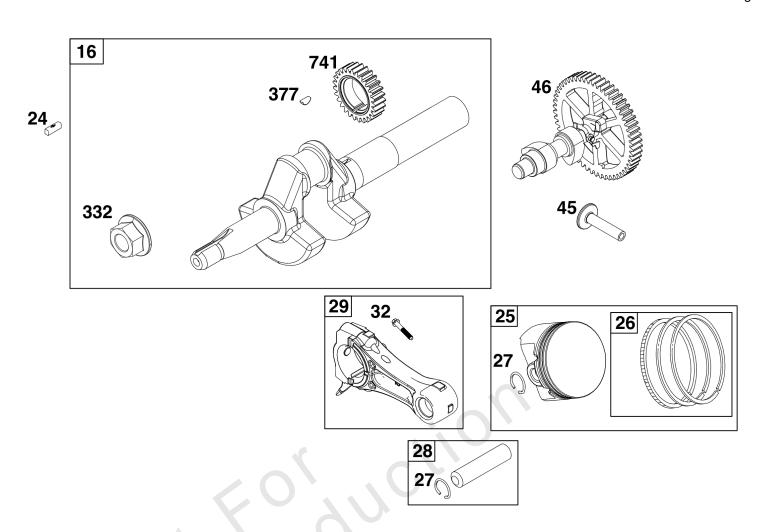


### Crankshaft Group

REF NO	PART NO	QTY	DESCRIPTION
16	797070	1	CRANKSHAFT
24	796335	1	KEY, Flywheel
25	791786	1	PISTON ASSEMBLY -(Standard)
25	791791		PISTON ASSEMBLY -(.020 Oversize)
26	791787	1	SET, Ring -(Standard)
26	791792		SET, Ring -(.020" Oversize)
27	690975	1	LOCK, Piston Pin
28	690229	1	PIN, Piston -(Standard)
29	791783	1	ROD, Connecting
32	791784	2	SCREW -(Connecting Rod)
45		2	TAPPET, Valve -(Part information located in Cylinder Head Group.)
46	693404	1	CAMSHAFT
332		1	NUT -(Part information located in Flywheel/Ignition/Starter Group.)
377	690979	1	KEY, Woodruff
741	695087	1	GEAR, Timing

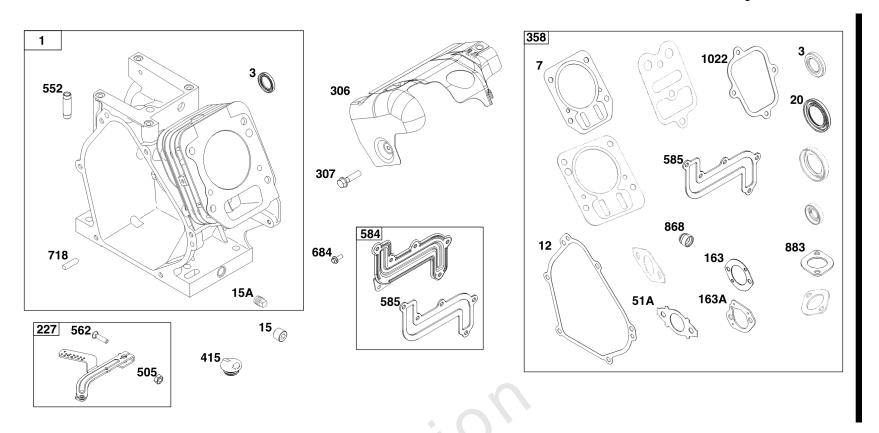

# Cylinder Group


REF NO	PART NO	QTY	DESCRIPTION
1	794188	1	CYLINDER ASSEMBLY
3	299819S	1	SEAL, Oil -(Magneto Side)
7		1	GASKET, Cylinder Head -(Part information located in Cylinder Head Group.)
12		1	GASKET, Crankcase -(Part information located in Crankcase Cover/Sump and Lubrication Group.)
15	555578	1	PLUG, Oil Drain
15A	691686	2	PLUG-OIL DRAIN
20		1	SEAL, Oil -(Part information located in Crankcase Cover/Sump and Lubrication Group.)
51A		2	GASKET, Intake -(Part information located in Cylinder Head Group.)
163		1	GASKET, Air Cleaner -(Part information located in Carburetor Group.)
163A		1	GASKET, Air Cleaner -(Part information located in Carburetor Group.)
227		1	LEVER, Governor Control -(Part information located in Controls Group.)
306	594516	1	SHIELD, Cylinder
307	794822	1	SCREW -(Cylinder Shield)
358	791797		GASKET SET, Engine -(Service Kits may include extra parts not specific to this engine.)
415		1	PLUG -(Part information located in Crankcase Cover/Sump and Lubrication Group.)
505		1	NUT -(Part information located in Controls Group.)
552	692346	1	BUSHING, Governor Crank
562		1	BOLT -(Part information located in Controls Group.)
584	791759	1	COVER, Breather Passage
584	791759	1	COVER, Breather Passage
585	791760	1	GASKET, Breather Passage
684	793369	6	SCREW -(Breather Passage Cover)
718		2	PIN, Locating -(Part information located in Crankcase Cover/Sump and Lubrication Group.)
868		1	SEAL, Valve -(Part information located in Cylinder Head Group.)
883		1	GASKET, Exhaust -(Part information located in Exhaust Group.)
1022		1	GASKET, Rocker Cover -(Part information located in Cylinder Head Group.)

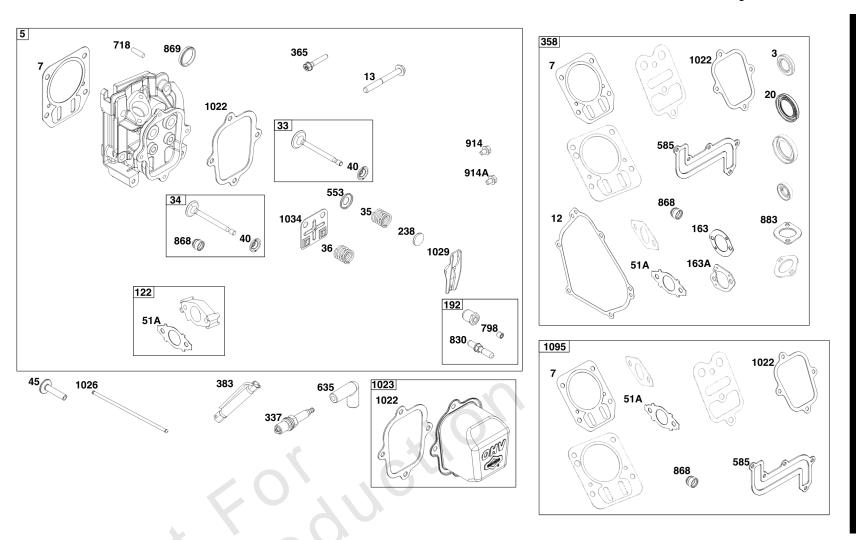

## Cylinder Head Group


REF NO	PART NO	QTY	DESCRIPTION
3		1	SEAL, Oil -(Part information located in Cylinder Group.)
5	594701	1	HEAD, Cylinder
7	791716	1	GASKET, Cylinder Head
12		1	GASKET, Crankcase -(Part information located in Crankcase Cover/Sump and Lubrication Group.)
13	594518	4	SCREW -(Cylinder Head)
20		1	SEAL, Oil -(Part information located in Crankcase Cover/Sump and Lubrication Group.)
33	499642	1	VALVE, Exhaust
34	795443	1	VALVE, Intake
35	691304	1	SPRING, Valve -(Intake)
36	691304	1	SPRING, Valve -(Exhaust)
40	692194	2	RETAINER, Valve
45	690977	2	TAPPET, Valve
51A	791718	2	GASKET, Intake
122		1	SPACER, Carburetor -(Part information located in Carburetor Group.)
163		1	GASKET, Air Cleaner -(Part information located in Carburetor Group.)
163A		1	GASKET, Air Cleaner -(Part information located in Carburetor Group.)
192	594382	2	ADJUSTER. Rocker Arm
238	691300	2	CAP, Valve
337	691043	1	PLUG, Spark
358			GASKET SET, Engine -(Part information located in Cylinder Group.)
365		2	SCREW -(Part information located in Carburetor Group.)
383	19576S	1	WRENCH, Spark Plug
553	594515	2	RETAINER, Valve
585	791760	1	GASKET, Breather Passage
635	692076	1	BOOT, Spark Plug
718		2	PIN, Locating -(Part information located in Crankcase Cover/Sump and Lubrication Group.)
798	597000	2	SCREW -(Rocker Arm)
830	594230	2	STUD, Rocker Arm -(Rocker Arm)
868	795440	1	SEAL-VALVE
869	691155	1	SEAT, Valve -(Intake)
883		1	GASKET, Exhaust -(Part information located in Exhaust Group.)
914	594517	3	SCREW -(Rocker Cover)
914A	699481	1	SCREW -(Rocker Cover) (Bottom)
1022	691890	1	GASKET-ROCKER COVER
1023	595245	1	COVER-ROCKER
1026	790287	2	ROD, Push
1029	797443	2	ARM, Rocker
1034	594229	1	GUIDE, Push Rod

19

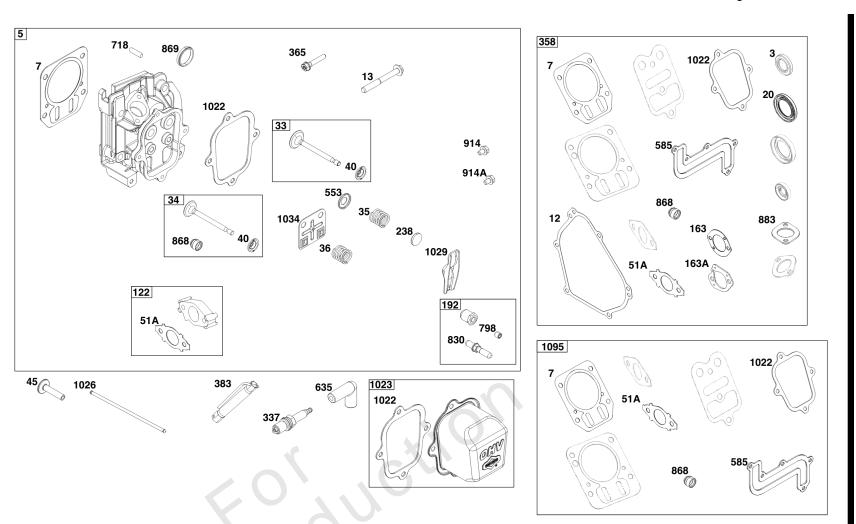


REF NO	PART NO	QTY	DESCRIPTION
1095	791798		GASKET SET, Valve -(Service Kits may include extra parts not specific to this engine.)

Mot For Reproduction

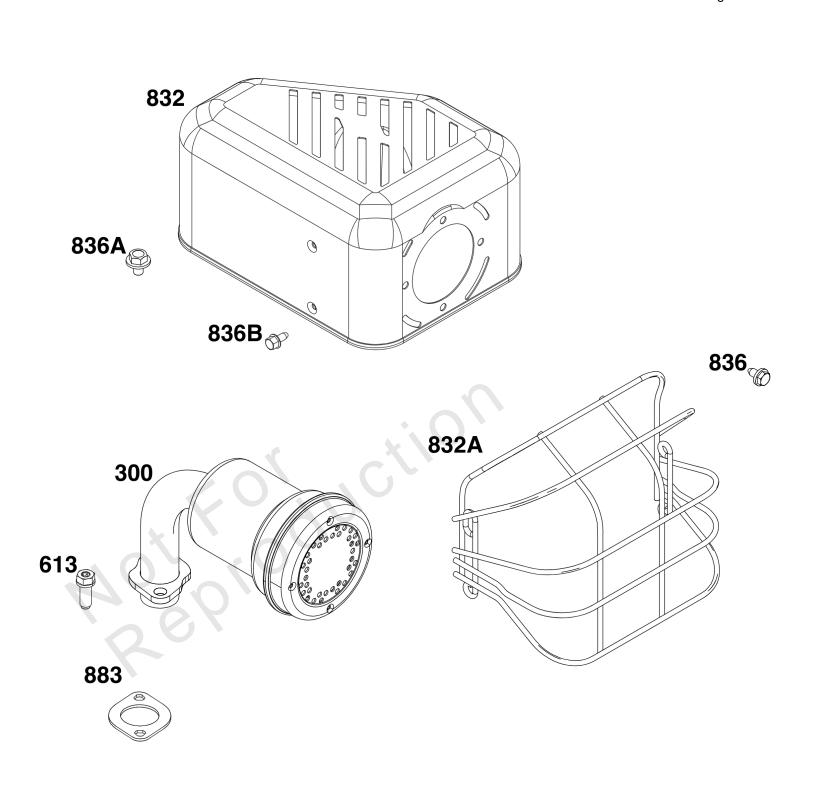


#### Exhaust Group

	PART NO	QTY	DESCRIPTION
300	693593	1	MUFFLER
613	798517	2	SCREW -(Muffler)
832	593953	1	GUARD, Muffler
832A	696516	1	MUFFLER
836	699204	4	SCREW -(Muffler Guard)
836A	594002	1	SCREW -(Muffler Guard)
836B	699203	4	SCREW -(Muffler Guard)
883	798516	1	GASKET, Exhaust

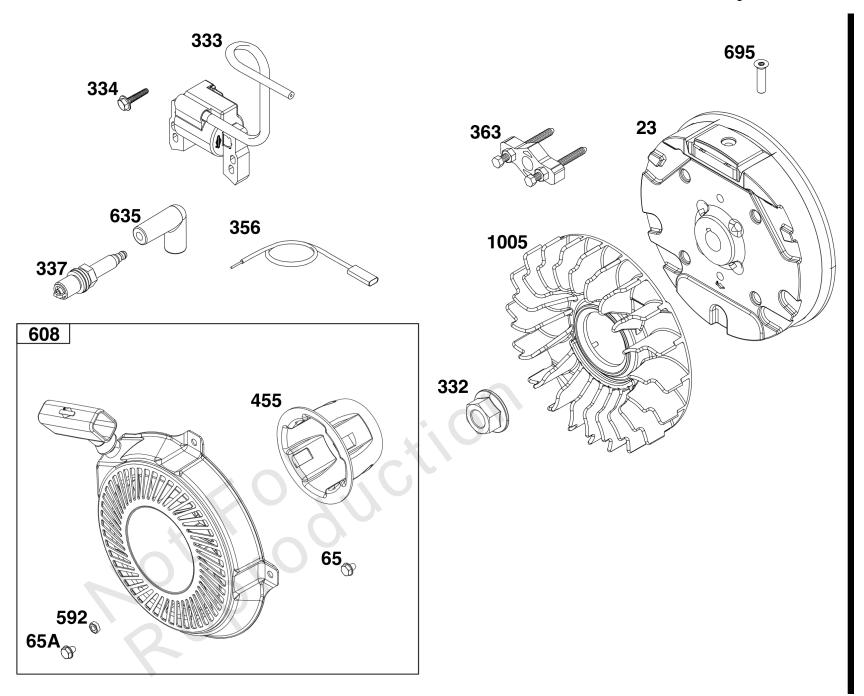

# Flywheel, Ignition, and Starter Group

DEE NO		OT\/	DECORIDATION
REF NO	PART NO	QTY	DESCRIPTION
23	798821	1	FLYWHEEL
65	699228	4	SCREW -(Rewind Starter)
65A	690837	4	SCREW -(Rewind Starter)
332	591988	1	NUT -(Flywheel)
333	591101	1	ARMATURE, Magneto
334	699477	2	SCREW -(Magneto Armature)
337		1	PLUG, Spark -(Part information located in Cylinder Head Group.)
356	692390	1	WIRE, Stop
363	19203	1	PULLER, Flywheel
455	591302	1	CUP, Flywheel
592	690800	4	NUT -(Rewind Starter)
608	591301	1	STARTER, Rewind
635		1	BOOT, Spark Plug -(Part information located in Cylinder Head Group.)
695	698807	1	SCREW -(Ring Gear)
1005	794273	1	FAN, Flywheel

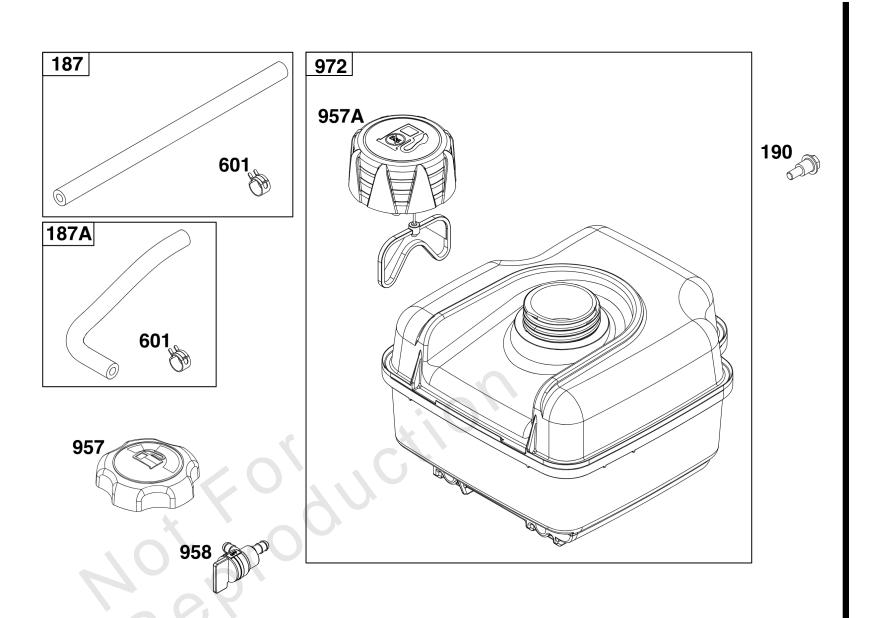

#### Fuel Supply Group

REF NO	PART NO	QTY	DESCRIPTION
187	791766	1	LINE, Fuel
187A	791867	1	LINE, Fuel
190	597133	4	SCREW -(Fuel Tank)
601	791850	4	CLAMP, Hose
957	795027	1	CAP, Fuel Tank
957A	799719	1	CAP, Fuel Tank
958	698180	1	VALVE, Fuel Shutoff
972	799863	1	TANK, Fuel

